




# PRO-STEP™

Fitting Instruction

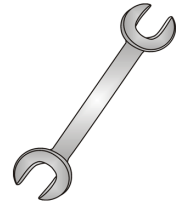


Issue 1

## PRO-TM1

Item	Qty	Description
A	1	PRO-TM1 STEP
B	4	M12 x 50 Bolts (10.9), 2 Nyloc Nuts & 2 S/P Washers
C	4	12 x 40 Flat Washers
D	6	Black M12 Bolt Caps

1. Using Item B with Item C loosely fix the Towbar crossmember between each side arm at the forward upper mounting point only leaving the fixing loose enough to enable you to slide Item A through the open slot.
2. Using Item B with Item C fix Item A through the remaining fixing point into the Towbars captive nut.
3. Fully tighten all fixings ensuring the Towbar and Pro-Step are rigid, square and secure.

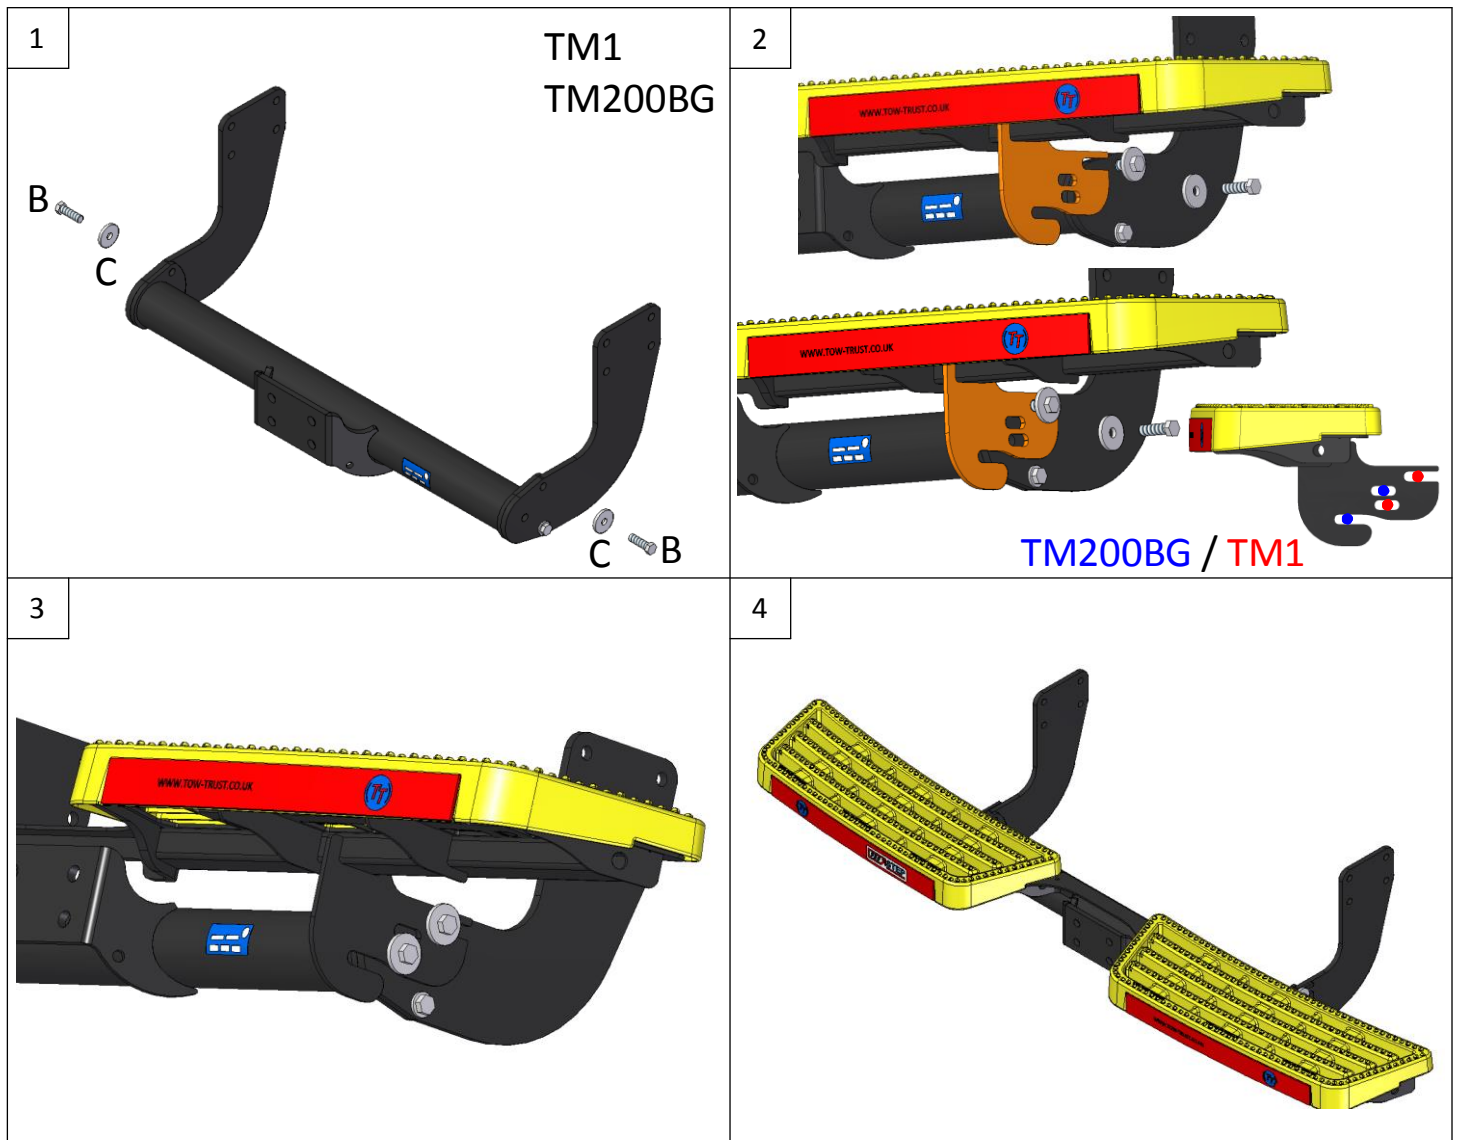

**Note:**

1. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.