




# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

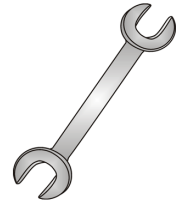


Issue 2

## TM9 Mercedes Sprinter Van SWB (With Step) 2006> VW Crafter Van (With Step) 2006>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	E	2	M16 x 50 Bolts, Nuts & S/P Washers
B	2	Side Arms	F	8	M12 x 130 Grade 10.9 Bolts & Nyloc Nuts & 4 S/P Washers
C	1	Coupling Spacer	G	6	M12 x 40 Bolts Grade 10.9 & 4 Nyloc Nuts & 2 S/P Washers
D	2	Clamp plates	H	12	12 x 25 Flat Washers

1. Remove the four bolts each side securing the step brackets to the chassis.
2. Using Item F with Item H loosely bolt Items B to the inside face of each chassis member on the forward most holes only.
3. Using Item F with Item D loosely bolt Items B to rearmost holes.
4. Using Item G bolt Item A to Item B.
5. Using Item D bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate. Note: Coupling spacer (Item C) is provided if required.
6. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

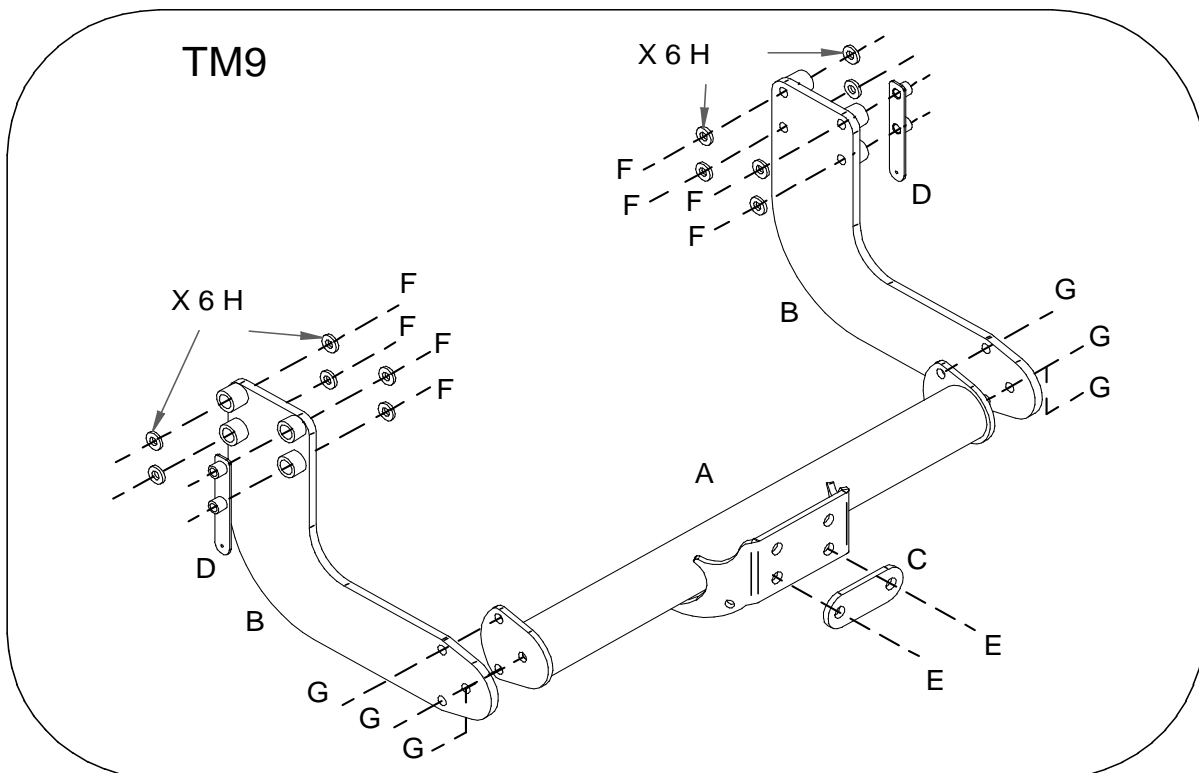

**Note:** nose load limits and vehicle manufacturers' trailer / caravan weight limits must be observed.