




Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

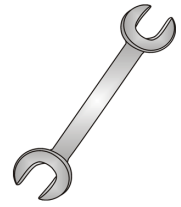


Issue 4

TR 6 RENAULT KANGOO VAN 2009> / MERCEDES CITAN 2012>

Item	Qty	Description	Item	Qty	Description
A	1	Towbar	D	2	M16 x 50 Bolts, Nuts & S/P Washers
B	1	L/H Side Arm	E	4	M10 x 40 Bolts & S/P Washers
C	1	R/H Side Arm	F	2	M8 x 40 Bolts & S/P Washers
			G	4	M12 x 35 Bolts, Nuts & S/P Washers
			H	4	10 x 25 Flat Washers
			J	2	8 x 25 Flat Washers
			K	1	M12 Nyloc Nut

1. Lower the spare wheel, remove the four lower fixings from the bottom edge of the bumper.
2. Remove the exhaust rubber from the rearmost exhaust hanger.
3. Remove the two fixings securing exhaust hanger to the chassis and discard.
4. Using items E and items H loosely bolt items B and C to each correct chassis.
5. Using item F and J loosely bolt items B and C to the remaining forward Towbar mounting points.
6. Rehang the exhaust silencer onto the hanger provided on Item C and secure in place with Item K.
7. Using item G bolt item A between each side arm.
8. Using item D bolt your desired ball bracket and wiring plate (Not supplied in this kit) to item A.
9. Fully tighten all nuts and bolts ensuring the Towbar is rigid, square and secure.

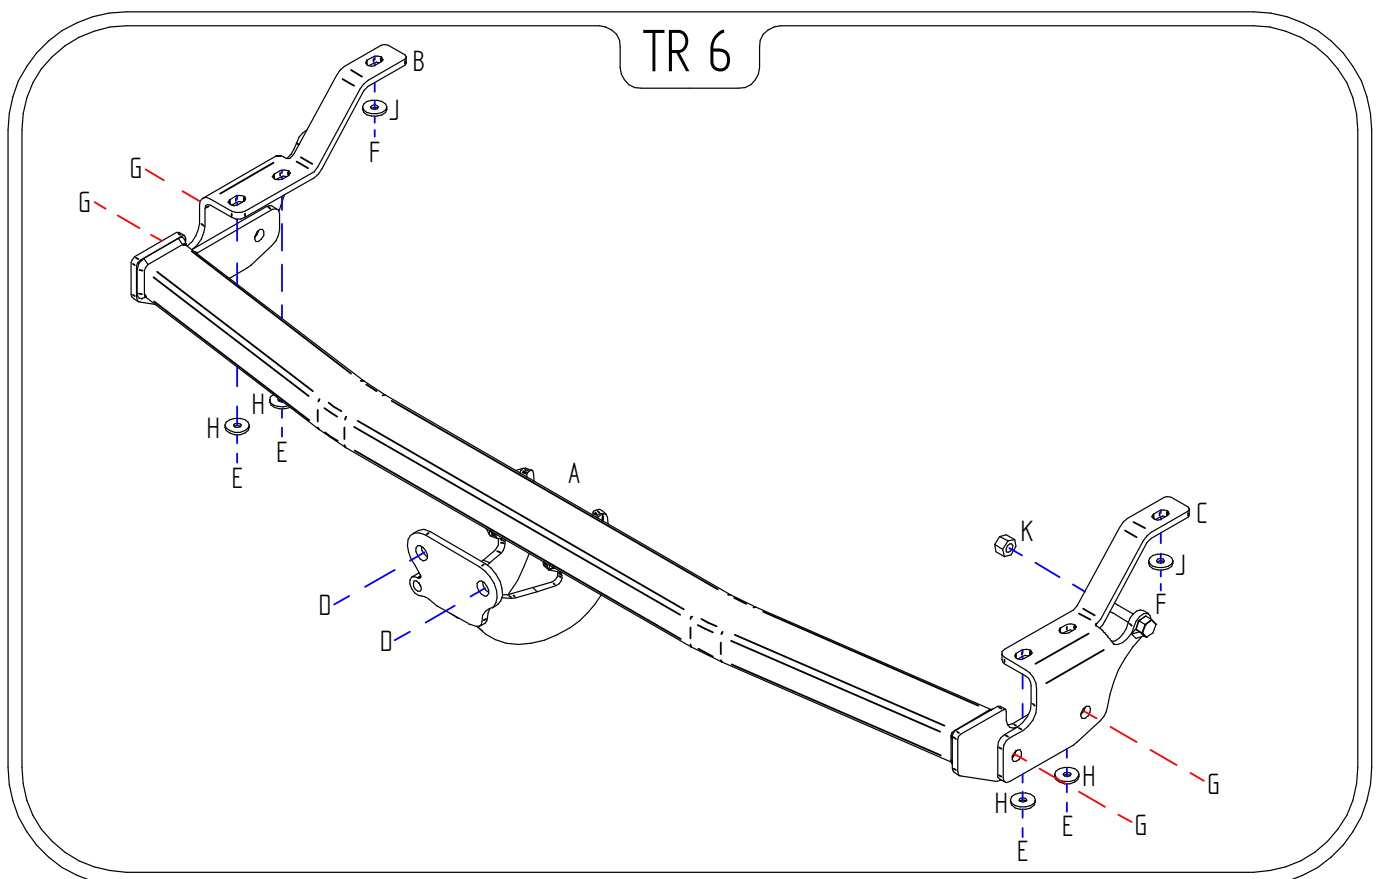

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.